



Die bestimmungsgemäße Verwendung dieser Werkzeuge ist die Reparatur, Instandhaltung und Wartung von Motoren. Prager & Co KG übernimmt keine Haftung für eine unsachgemäße Verwendung dieser Werkzeuge. Prager & Co KG kann nicht für Schäden an Personen, Gegenständen oder Geräten verantwortlich gemacht werden, die sich bei der Nutzung dieser Werkzeuge ergeben.

Nr. 36619

Motoreinstell-Werkzeug-Satz, VAG

- für 3-Zylinder-Benzinmotoren mit Einfach- oder Doppelnockenwelle
- im Seat Cordoba, Ibiza und Toledo
- im Skoda Fabia I/II, Octavia II, Praktik, Rapid/Spaceback, Roomster und Yeti
- im VW Fox und Polo
- zum Blockieren der Nockenwellen und Kurbelwelle
- beim Steuerkettenwechsel oder der Motorreparatur

zum Beispiel für Motorcodes:

AWY, AZQ, BBM, BMD, BME, BXV, BZG, CEVA, CGPA, CGPB, CGPC, CHFA, CHFB


Nr. 36619SP

Motoreinstell-Werkzeug-Satz, VAG

- für 3- und 4-Zylinder-Benzinmotoren mit Einfach- oder Doppelnockenwelle
- im Audi A1, A3/Cabrio und S1
- im Seat Altea, Cordoba, Ibiza, Leon und Toledo IV
- im Skoda Fabia I/II, Octavia II, Praktik, Rapid/Spaceback, Roomster und Yeti
- im VW Beetle II, Caddy III, Fox, Golf VI, Jetta IV, Polo und Touran
- zum Blockieren der Nockenwellen und Kurbelwelle
- beim Steuerkettenwechsel oder der Motorreparatur

zum Beispiel für Motorcodes:

AWY, AZQ, BBM, BMD, BME, BXV, BZG, CBZA, CBZB, CBZC, CEVA, CGPA, CGPB, CGPC, CHFA, CHFB

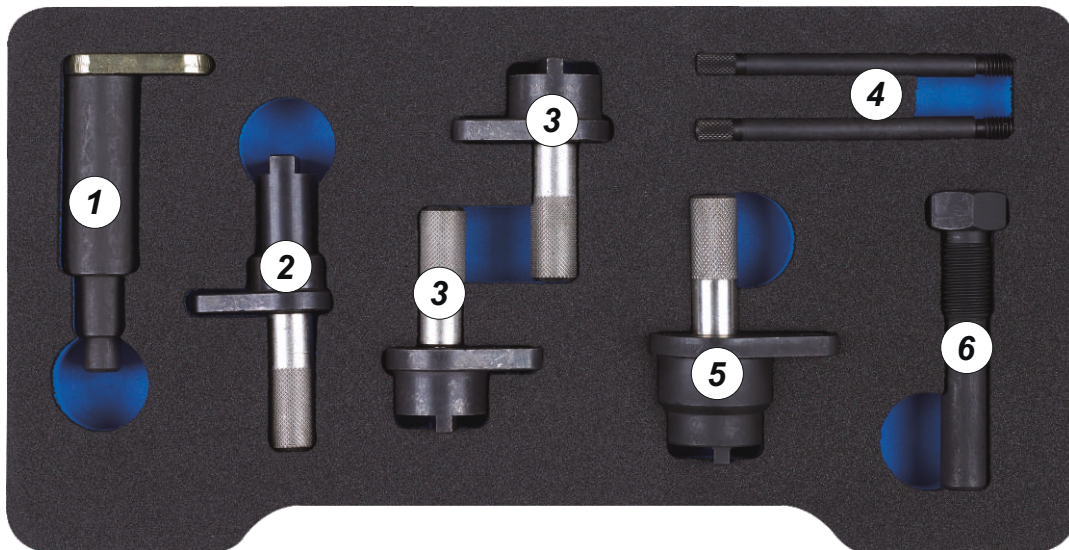

- Motor nicht starten, wenn Werkzeuge noch montiert sind.
- Die Blockierwerkzeuge dürfen nicht beim Lösen oder Festziehen von Kurbelwellen- oder Nockenwellen-Rädern zum Gegenhalten verwendet werden.
- Angegebene Daten erfolgen unter Vorbehalt.
- Diese Werkzeuge nur unter Beachtung aller Sicherheitshinweise, technischen Dokumentationen und Vorgaben des Fahrzeugherstellers verwenden.

| Bild Nr. | Bezeichnung | OEM-Vergleichsnummer | | | 36619 | 36619SP | Artikel Nr. |
|----------|---|----------------------|--|--|-------|---------|-------------|
| 1 | Arretierbolzen Kurbelwelle | T10121 | | | ✓ | ✓ | 3520-20 |
| 2 | Arretierwerkzeug Nockenwelle | T10120 | | | ✓ | ✓ | 3520-27 |
| 3 | Arretierwerkzeug Nockenwellen, 2-tlg. | T10123 | | | ✓ | ✓ | 3520-19 |
| 4 | Führungsbolzen Kompressoreinbau, 2-tlg. | T10341 | | | | ✓ | 6668-03 |
| 5 | Blockierung Nockenwelle | T10414 | | | | ✓ | 6668-02 |
| 6 | Absteckbolzen Kurbelwelle | T10340 | | | | ✓ | 3518-03 |



The intended purpose of these tools is for repairing, servicing and maintaining engines. Prager & Co KG does not accept any liability for incorrect use of any of these products. Prager & Co KG cannot be held responsible for any damage to personnel, property or equipment when using these tools.

Nr. 36619

Timing Tool Set, Audi / VW

- for 3-cylinder petrol engines with single or twin camshafts
- in Seat Cordoba, Ibiza and Toledo
- in Skoda Fabia I/II, Octavia II, Praktik, Rapid/Spaceback, Roomster and Yeti
- in VW Fox and Polo
- for locking the camshafts and crankshaft
- for timing chain replacement or engine repair

e.g. for engine codes:

AWY, AZQ, BBM, BMD, BME, BXV, BZG, CEVA, CGPA, CGPB, CGPC, CHFA, CHFB


Nr. 36619SP

Timing Tool Set, Audi / VW

- for 3- and 4-cylinder petrol engines with single or twin camshafts
- in Audi A1, A3/Cabrio and S1
- in Seat Altea, Cordoba, Ibiza, Leon and Toledo IV
- in Skoda Fabia I/II, Octavia II, Praktik, Rapid/Spaceback, Roomster and Yeti
- in VW Beetle II, Caddy III, Fox, Golf VI, Jetta IV, Polo and Touran
- for locking the camshafts and crankshaft
- for timing chain replacement or engine repair

e.g. for engine codes:

AWY, AZQ, BBM, BMD, BME, BXV, BZG, CBZA, CBZB, CBZC, CEVA, CGPA, CGPB, CGPC, CHFA, CHFB

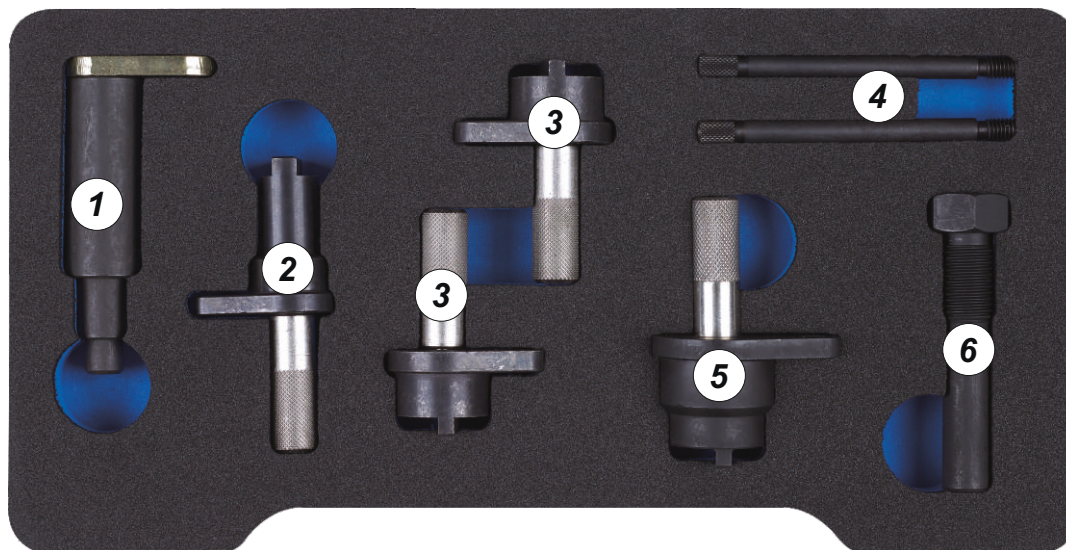

- Remove all tools before starting engine.
- Do not use the locking tools as counterholder when loosening or tightening camshaft or crankshaft sprockets.
- No responsibility is taken for the correctness of this data.
- Always observe and follow all safety notes, technical documentations, specifications and instructions of the vehicle manufacturer.

| picture Nr. | description | OEM-comparison number | | | 36619 | 36619SP | item no. |
|-------------|---|-----------------------|--|--|-------|---------|----------|
| 1 | Crankshaft Locking Bolt | T10121 | | | ✓ | ✓ | 3520-20 |
| 2 | Camshaft Locking Tool | T10120 | | | ✓ | ✓ | 3520-27 |
| 3 | Camshaft Locking Tool, 2 pcs. | T10123 | | | ✓ | ✓ | 3520-19 |
| 4 | Compressor Assembly Guide Bolts, 2 pcs. | T10341 | | | | ✓ | 6668-03 |
| 5 | Camshaft Locking Tool | T10414 | | | | ✓ | 6668-02 |
| 6 | Crankshaft Locking Bolt | T10340 | | | | ✓ | 3518-03 |